

How to restart your B-TEC Battery with an ePower AC Charger

Step 1





 
Press & hold MENU button for 3 seconds to enter the Charger Function Menu

Step 2





Press SEL to change battery types until program is flashing



Step 3



Press SEL to change charger voltage until it reads 13.3V



Press SET to keep the setting and go to the next menu

Step 4



Press SEL to change charger current until it reads 5A



Press **SET** to return to Home Menu

Now leave the charger for 2 hours to gently bring the voltage back up before setting the charger back to the Lithium profile for normal charging.

Steps to set your AC charger back to the Lithium profile

Step 1

 




Press & hold MENU button for 3 seconds to enter the Charger Function Menu



Step 2





Press **SEL** to change battery types until Lithium is flashing

Step 3









Press **SEL** to change Lithium voltage Press SET to keep the setting and go to the next menu

Step 4

Press SEL to change charger current H until it reads 40A





Press SET to keep the setting and go to the next menu

Step 5

Press SEL to change charger current until it reads 8A





Press SET to keep the setting and go to the next menu

Press and release the Menu button to exit the settings













Ph: 1300 851 535 | www.enerdrive.com.au

